


LORA Headboard and Bedframe (All Sizes)

Assembly Instructions

LORA Karyola (Tüm Ölçüler)

Montaj Talimatı

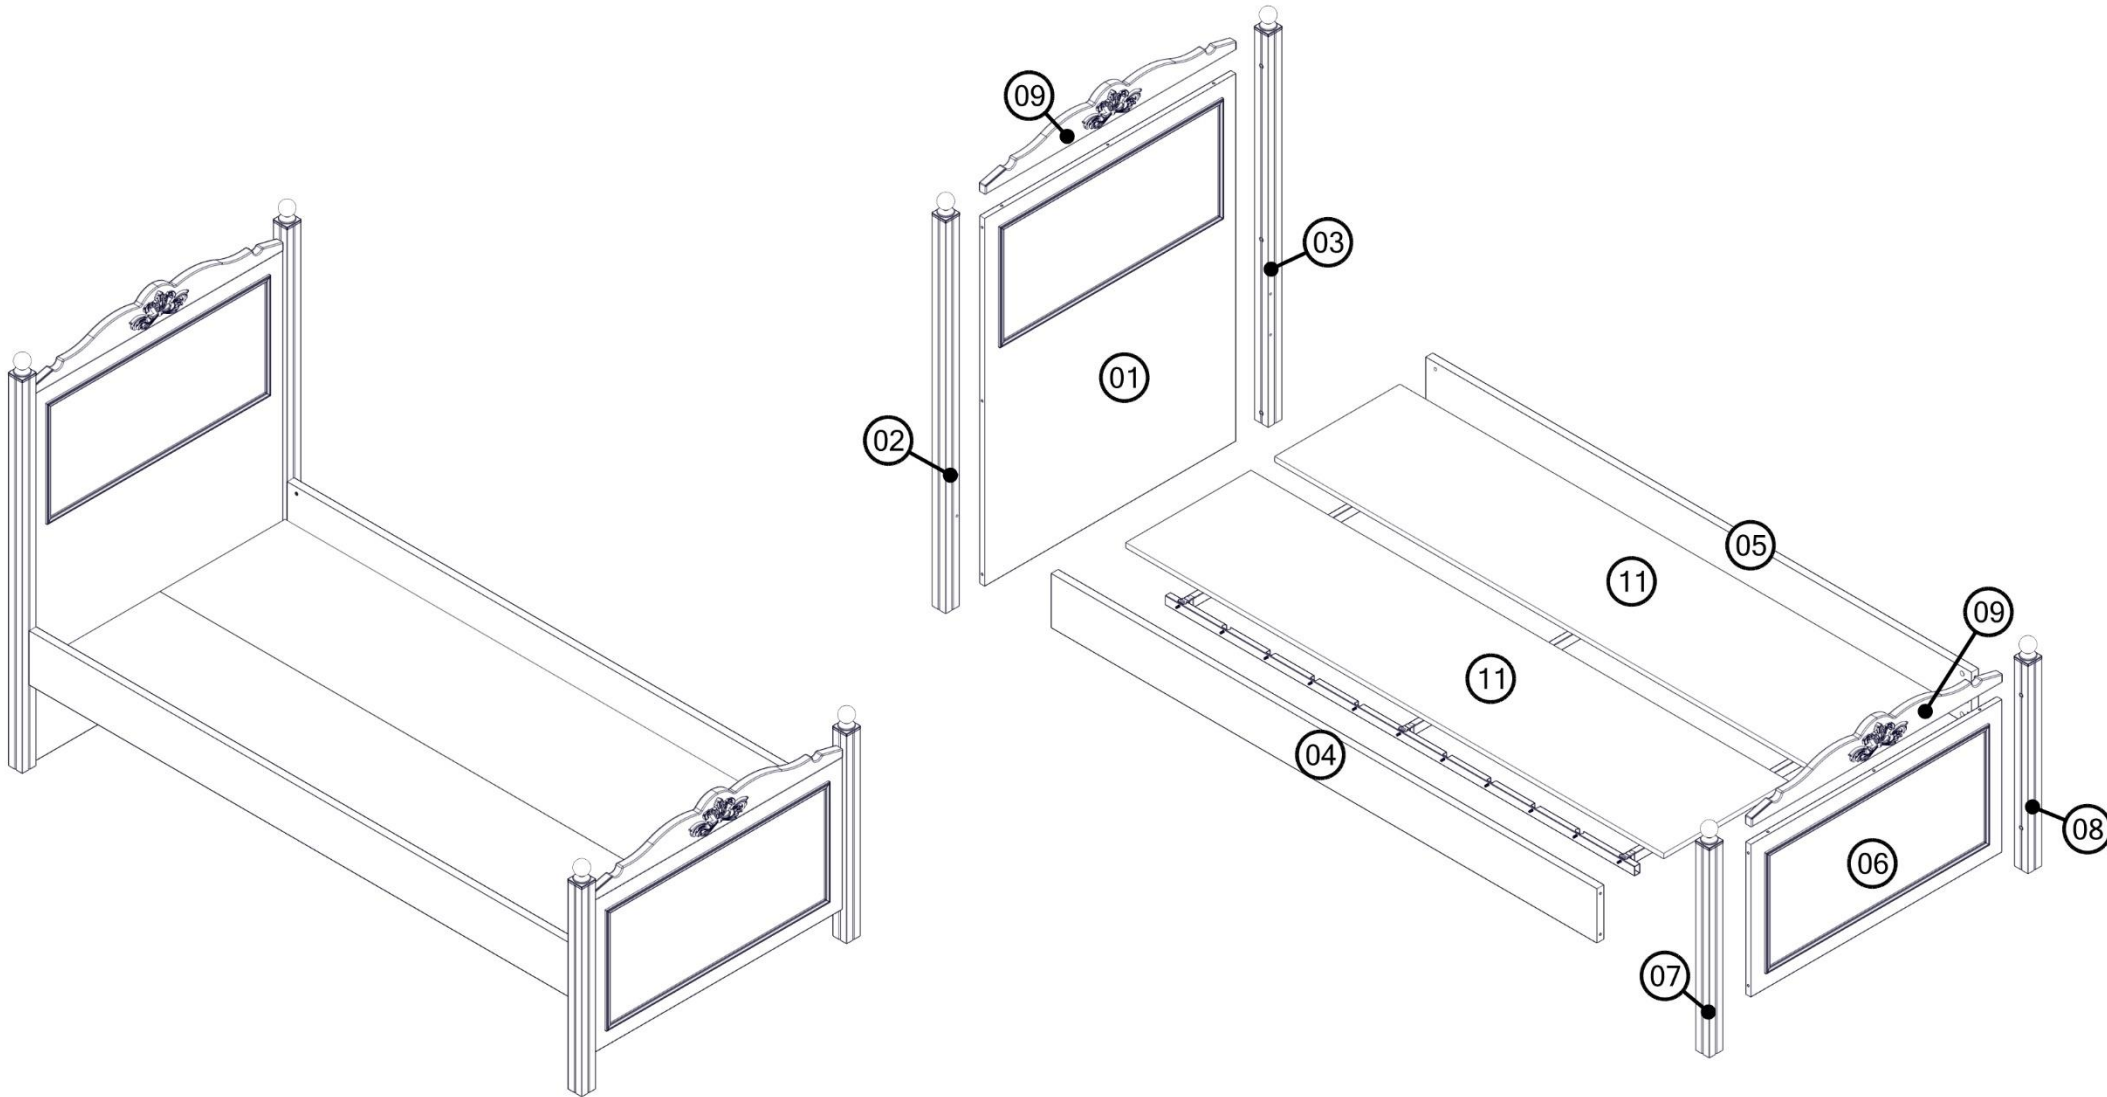


Pz3



PEOPLE NEEDED REQUIRED TOOL

Package Includes

Paket İçeriği

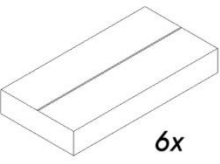

6x

Headboard and Bedframe Size 90X200 Parts

N	L (mm)	W (mm)	T (mm)
01	910.00	1153.00	26.00
02	1230.00	50.00	50.00
03	1230.00	50.00	50.00
04	1978.00	170.00	25.00
05	1978.00	170.00	25.00
06	478.00	910.00	26.00
07	655.00	50.00	50.00
08	655.00	50.00	50.00
09	115.00	909.00	25.00
11	1950.00	453.50	17.00

Headboard and Bedframe Size 100X200 Parts

N	L (mm)	W (mm)	T (mm)
01	1010.00	1153.00	26.00
02	1230.00	50.00	50.00
03	1230.00	50.00	50.00
04	1978.00	170.00	25.00
05	1978.00	170.00	25.00
06	478.00	1010.00	26.00
07	655.00	50.00	50.00
08	655.00	50.00	50.00
09	115.00	1009.00	25.00
11	1950.00	503.50	17.00

Headboard and Bedframe Size 120X200 Parts

N	L (mm)	W (mm)	T (mm)
01	1210.00	1153.00	26.00
02	1230.00	50.00	50.00
03	1230.00	50.00	50.00
04	1978.00	170.00	25.00
05	1978.00	170.00	25.00
06	478.00	1210.00	26.00
07	655.00	50.00	50.00
08	655.00	50.00	50.00
09	115.00	1209.00	25.00
11	1950.00	603.50	17.00



H

4x



I

2x



J

2x



K

5x



A

16x



D

4x



B

22x



E

20x



C

4x



E1

20x




E2

20x



F

4x

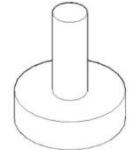

G

4x




L

4x




M


1x

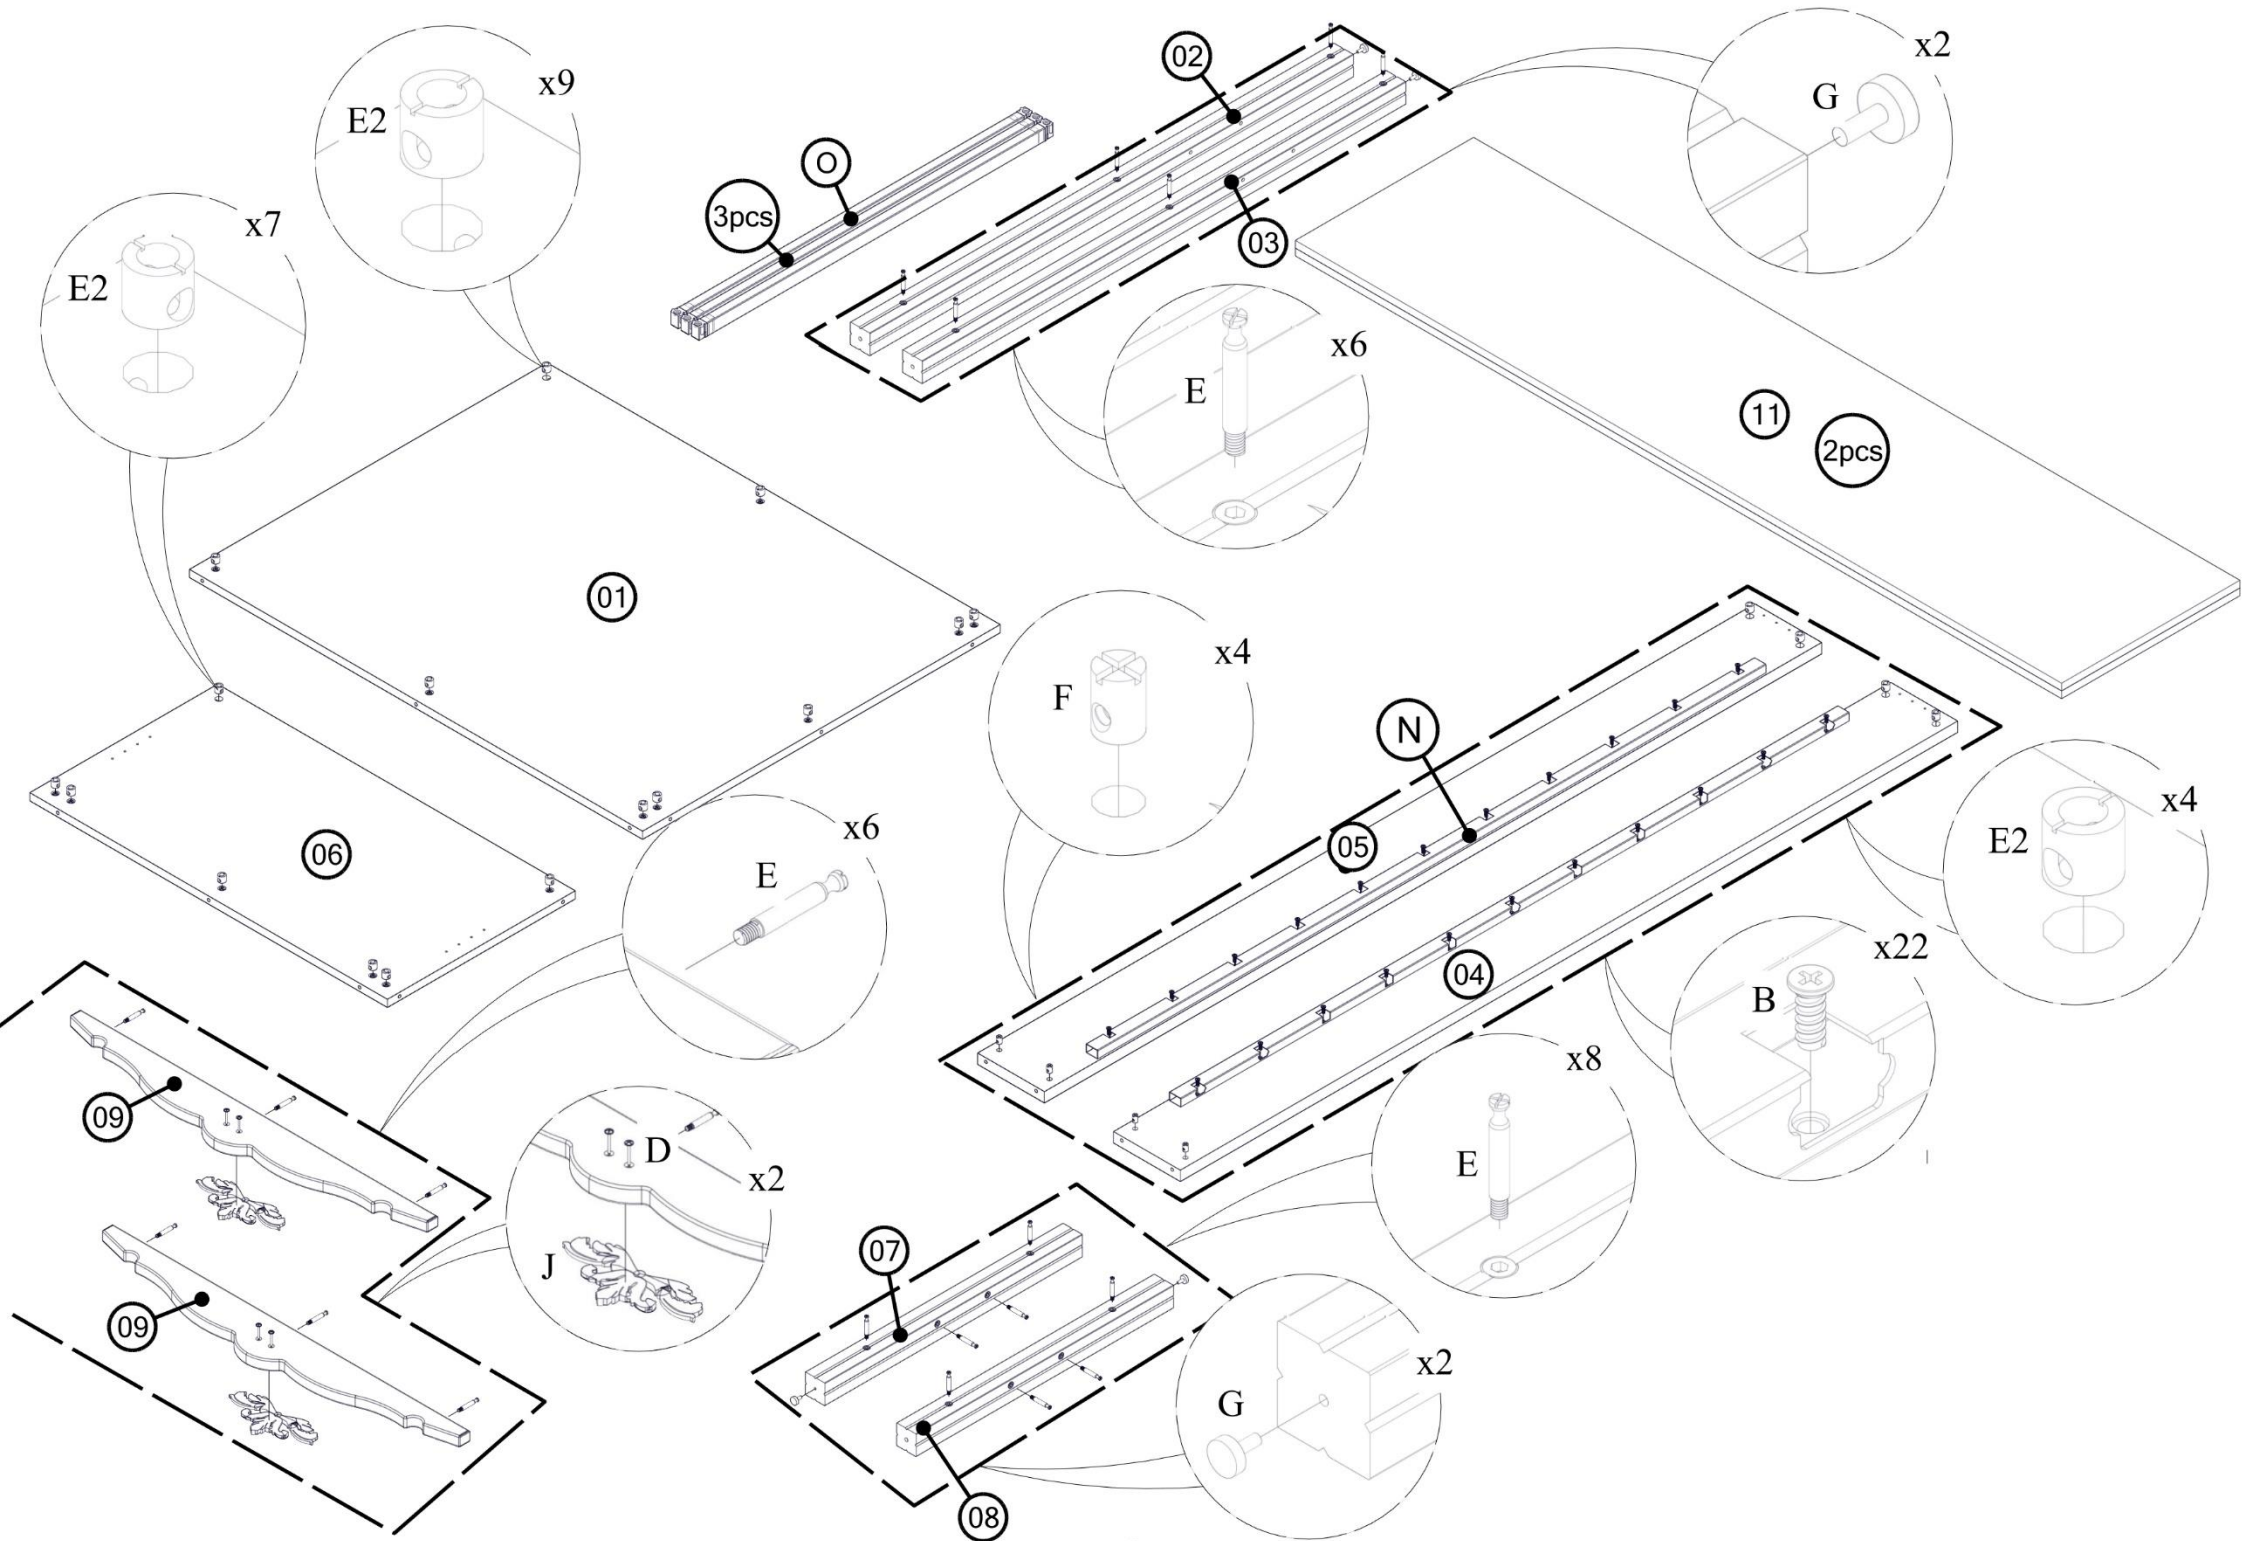


1

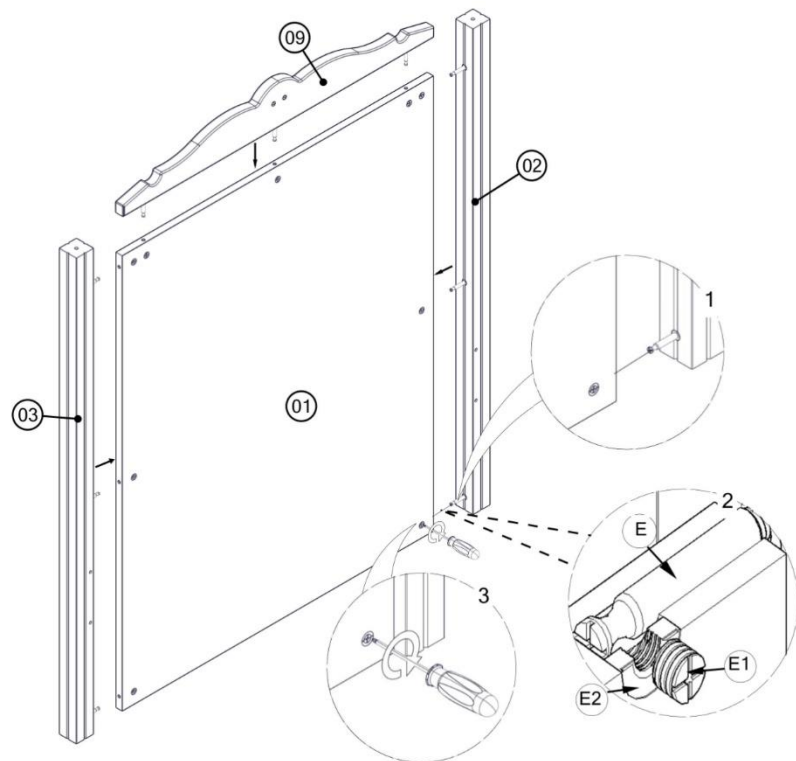


2

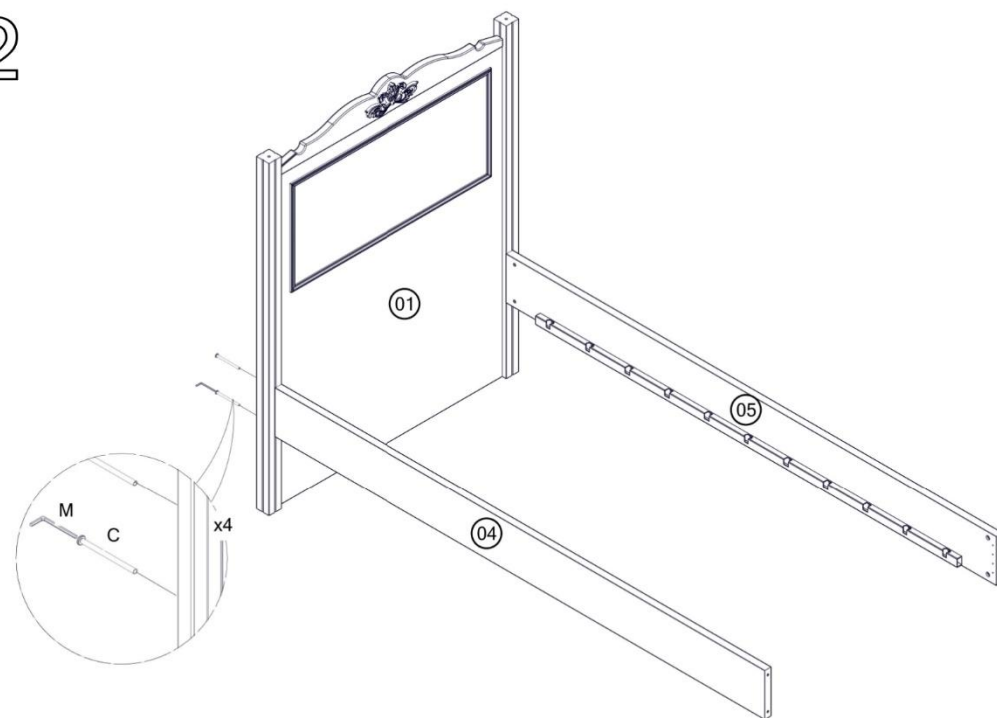


3

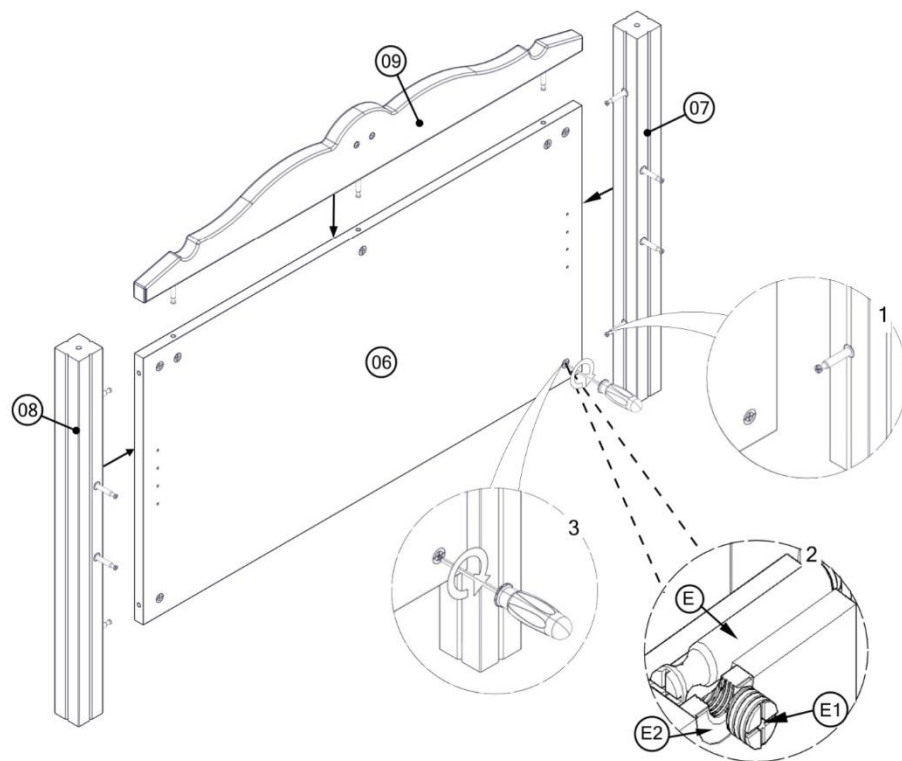


4

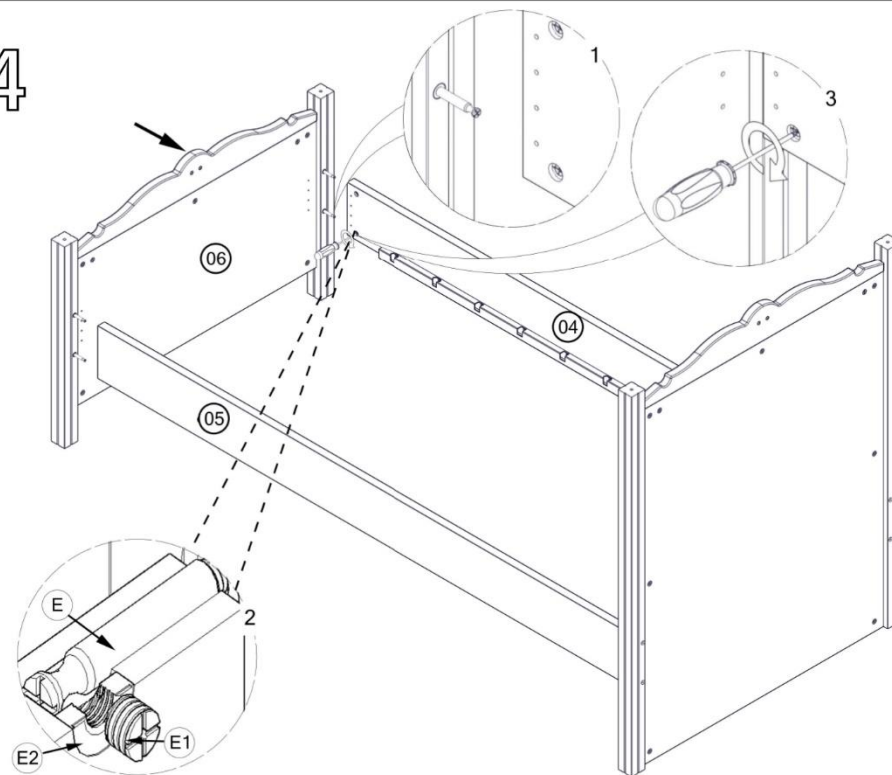

5

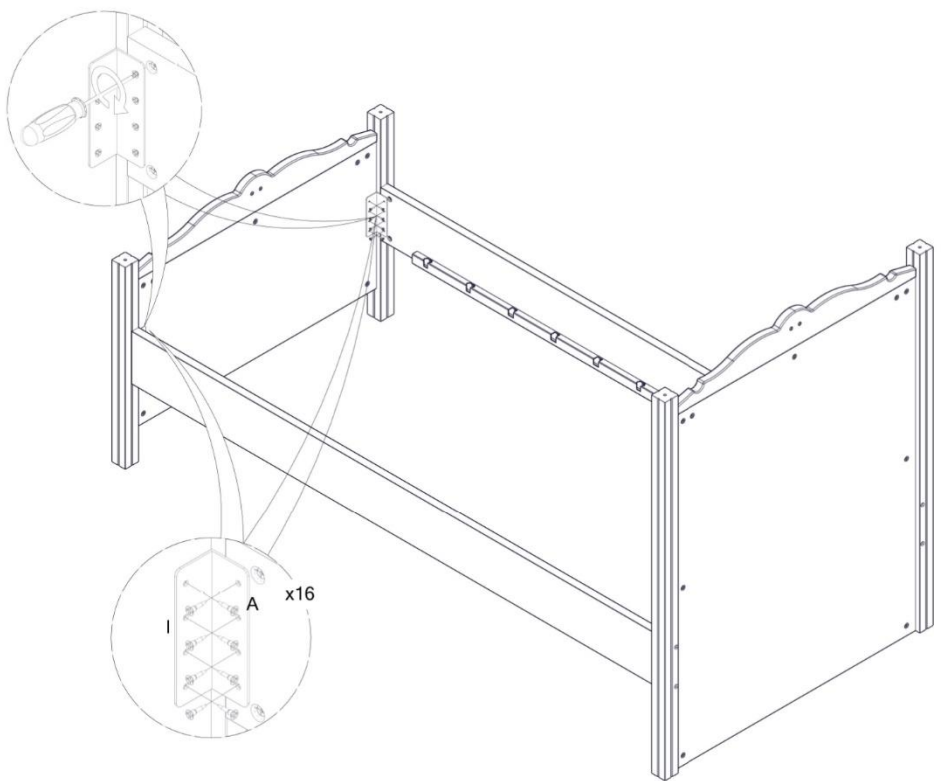

6

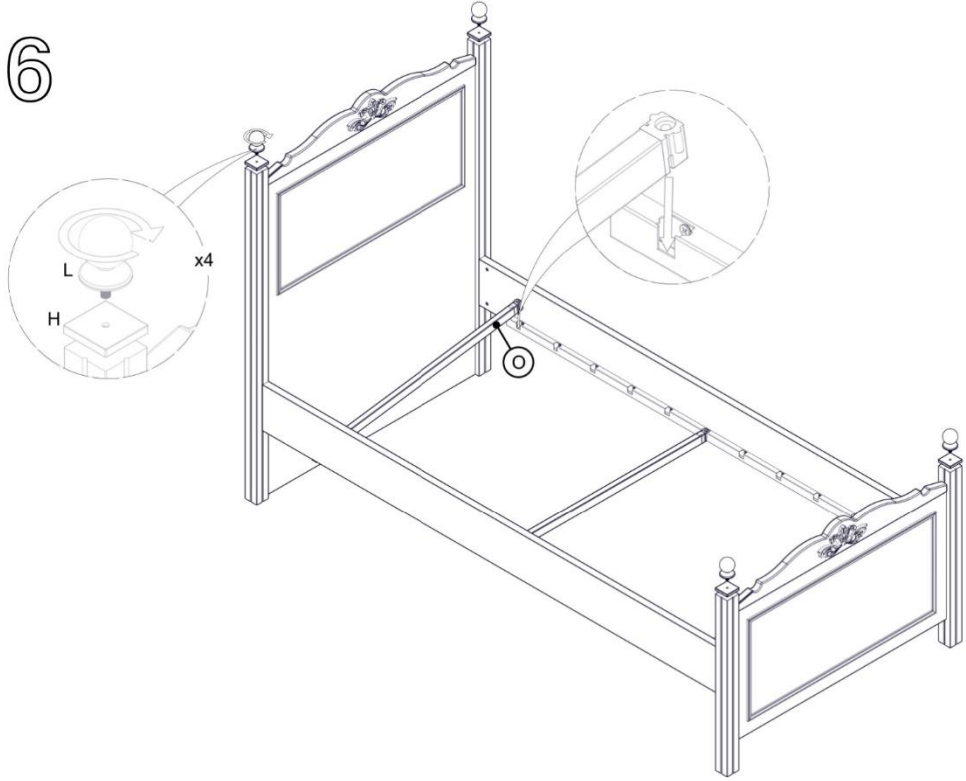

7

